



CUPS Printing App

- [Getting Started with CUPS Printing on IGEL OS \(see page 3\)](#)
- [Configuration of CUPS Printing on IGEL OS \(see page 5\)](#)

Getting Started with CUPS Printing on IGEL OS


i Printers cannot yet be detected automatically.

i Because the endpoint device merely places incoming print jobs in a queue, you need to install the printer on the server. Note that you will need to be logged in as an administrator to the terminal to which the printer is connected.


i Settings made here apply to local printing (e.g. PDF, Chromium etc.) and to mapping a local printer into a session.

How to Set Up a Printer

1. In the profile configurator, go to **Apps > CUPS Printing > Printer** and click .

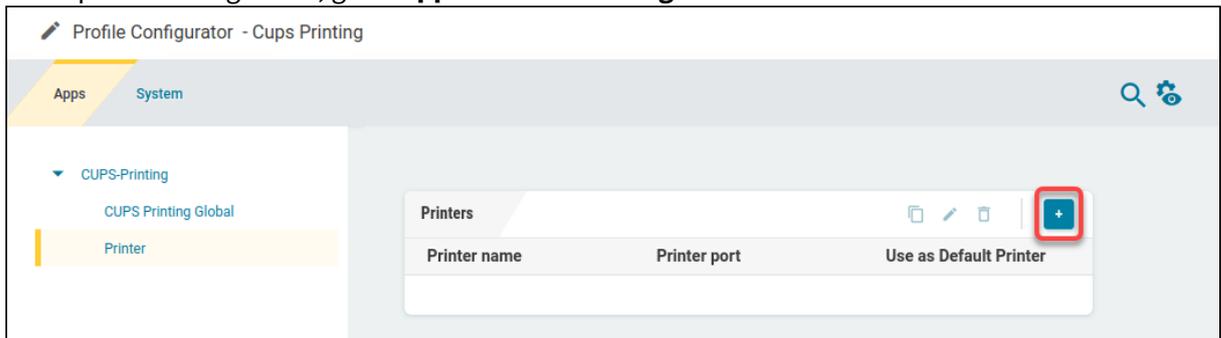

2. Edit the settings according to your needs and then click **Confirm**.

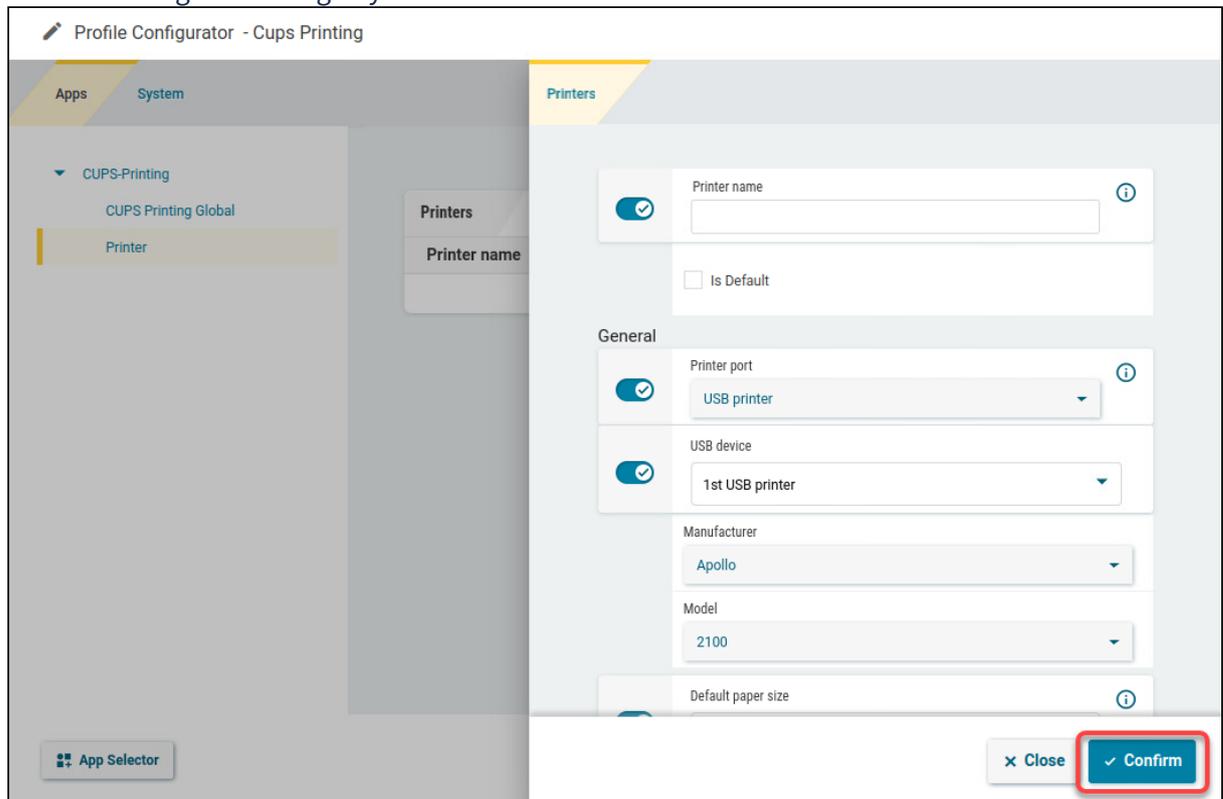


Configuration of CUPS Printing on IGEL OS

Configuring Global Printer Settings

The settings defined here are valid for all printers if not specified otherwise.

1. In the profile configurator, go to **Apps > CUPS Printing > CUPS Printing Global**.

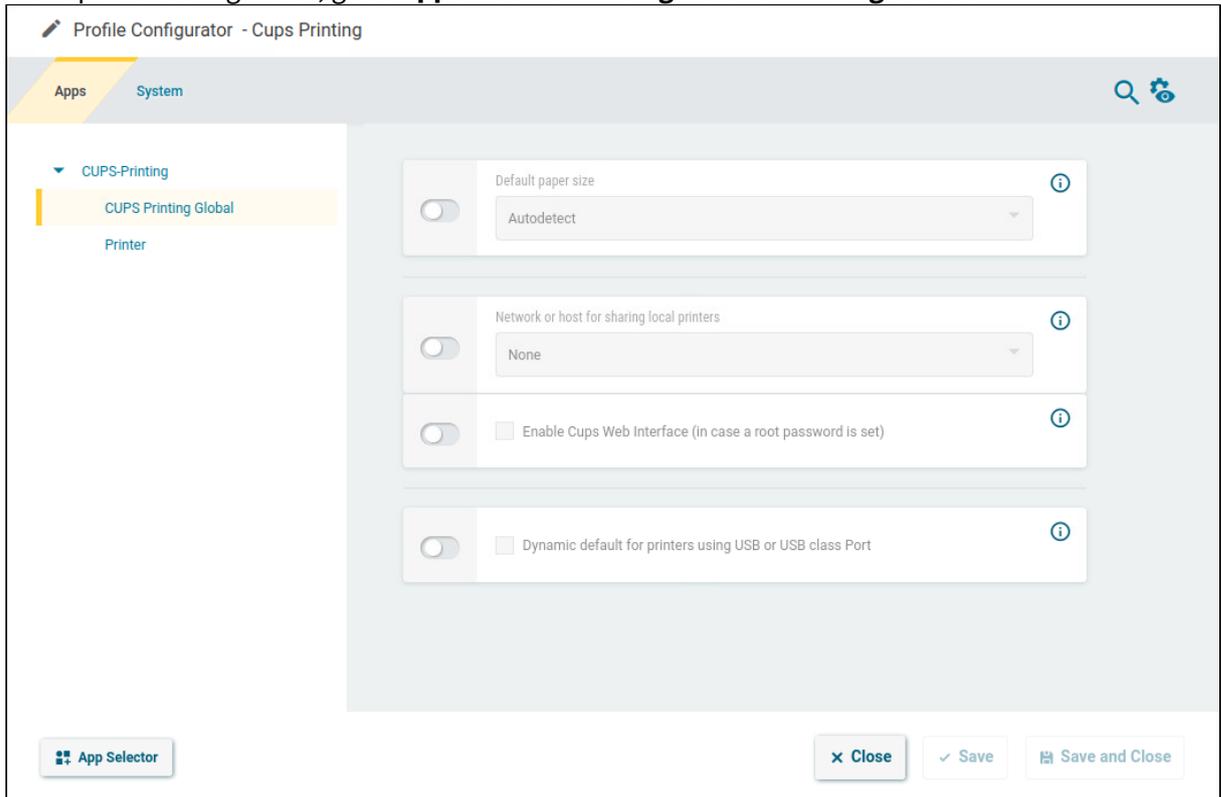

2. Edit the settings according to your needs. The parameters are described in the following.

Default paper size

Set the printer-specific paper size that you would like to use as a default.

Possible values:

- **Autodetect** (default)
- **Letter**
- **Legal**
- **Executive**
- **A5**
- **A4**
- **A3**

Network or host for sharing local printers

Access to the printer is possible from this network or host.

Possible values:

- **None** (default)
- **Local network**: Allows printing on the local device from the local network.

 This can also be given in the form 192.0.2.* or 192.0.2.0/24 or *.domain.com or 192.0.2.1 or host.domain.com.

- **Global**: Allows printing on the local device from the global network.

Enable CUPS Web Interface (in case a root password is set)

If you have set a root password under **Security > Password > Administrator**, you can enable the CUPS web interface on port 631. You can access it via the browser at <http://localhost:631/>

The CUPS Web Interface is disabled; see Known Issues. (Default)

Dynamic default for printers using USB or USB class port

If your users frequently change their workplace, e.g. in a mobile workplace scenario, they might often face the problem that the local printer is not the one that is set as the default printer and, as a result, this local printer may not be redirected to the remote session.

To save your users from dealing with default printer selection, you can configure IGEL OS to automatically set the currently connected printer as the default printer. This feature works with USB printers and USB class printers.

The currently connected USB printer or USB class printer will be automatically set as the default printer (no matter if any of the printers under **CUPS Printing > Printer** has already been selected manually as the default printer via **Is Default**). If several printers are connected at the same time, the last printer you plugged in will be automatically set as the default printer.

The dynamic selection of the default printer is disabled. (Default)

Limitations


The method of the dynamic selection of the default printer is feasible if only one printer is connected at a time.

Note: The default printer selection may change on a reboot of the endpoint device. This means: If two or more printers are connected to the endpoint device at the same time, the printer that was dynamically selected as the default printer before the reboot will NOT necessarily remain the default printer after the reboot.

Best practice recommendations for the case when multiple USB printers are used can be found [hier \(see page 0\)](#).

Configuring an Individual Printer

1. In the profile configurator, go to **Apps > CUPS Printing > Printer** and click . If you want to edit an existing printer, select it and click .

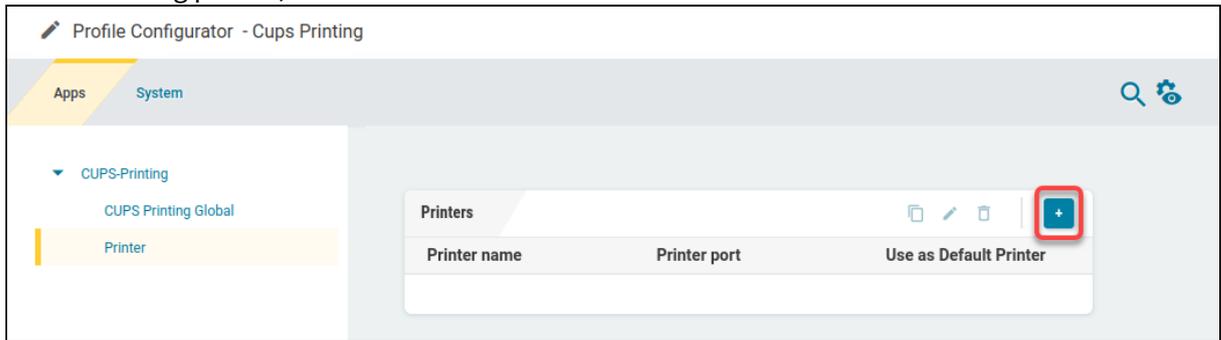

2. Edit the settings according to your needs. The parameters are described in the following.

Printer name

The name by which this printer will be referred to. Maximum length: 127 characters. The printer's name must start with a letter. Allowed characters: Letters, digits, underscores; blank spaces are not allowed.

 The name of each printer must be unique.

Is default

This printer is the default printer for all sessions. See also [Dynamic default for printers using USB or USB class port \(see page 0\)](#).

Printer port

Interface type for locally connected printers or the network protocol for network printers. For details, see <https://kb.igel.com/igelos-11.08.200/en/settings-to-be-configured-for-each-printer-port-type-69178113.html> (IGEL OS 11 article).

- **USB printer**
- **USB class printer**
- **TCP network printer**
- **IPP network printer**

 Depending on the chosen **Printer port** type, different parameters have to be configured.

i If multiple USB printers are used at the same time, it is not recommended to use "2nd USB printer"/ "1st USB printer" (**Printer port**="USB printer") since the numbering depends on the timing the printer is registered on the endpoint and can be different on the next reboot. Instead, it is advisable to use one of the following methods:

USB Printer Class

The printer is assigned by matching patterns. This method is recommended if the endpoint device is to be configured completely with the UMS, preferably with a profile.

1. Open the relevant printer under **CUPS Printing > Printer**.
2. Set **Printer port** to "USB class printer" and edit the printer settings appropriately.
3. Optional: Set the printer as the default printer by enabling **Is Default**.

Manufacturer

List of possible printer manufacturers. When you select a manufacturer here, the relevant selection of models will be provided under **Model**.

i A custom printer driver cannot yet be defined.

Model

List of possible models.

Default paper size

Set the printer-specific paper size that you would like to use as a default.
Possible values:

- **Letter**
- **Legal**
- **Executive**
- **A5**
- **A4**
- **A3**
- **System setting:** The global setting is used. (Default)

Share printer

You can access the printer via the network if you have enabled the print server under **CUPS Printing > CUPS Printing Global > Network or host for sharing local printers**. (Default)

Map printer in Citrix sessions

The printer is available in Citrix sessions. (Default)

i Install the HP Color LaserJet 2800 Series PS driver on the server side to redirect the local printer to Citrix sessions, see <https://support.citrix.com/article/CTX140208>.

Map printer in AVD sessions

The printer is available in AVD sessions. (Default)

CUPS printer redirection must also be activated under **AVD > AVD Sessions > [session name] > Printing**.

Printer driver

Windows driver name for the automatically created printer. Specify only if the Universal Printer Driver should not be used.

 The name must not contain “;” or “:”.
Note that special characters, spaces, and case-sensitive characters are relevant when specifying a driver name.