

VNM
HANDBRAKE
Quick Guide



Content




- 1. Typical VNM Handbrake
- 2. **Addon** (horizontal arm; red, blue spring & green elastomer)
- 3. Hexagon alloy key
- 4. USB – GX12 cable
- 5. Steel springs
- 6. Back plate for Handbrake and Shifter

Connection




- ✓ At the left of Handbrake is: Plug-in loadcell input by jack XH2.54-4P
- ✓ At the right of Handbrake is:
 - 1. Plug in update firmware jack XH2.54-4P (ST-link)
 - 2. Button DFU/Game Mode
- ✓ At the bottom of Handbrake is: Plug-in Connect to PC by USB – GX12 cable

Adjust Handbrake

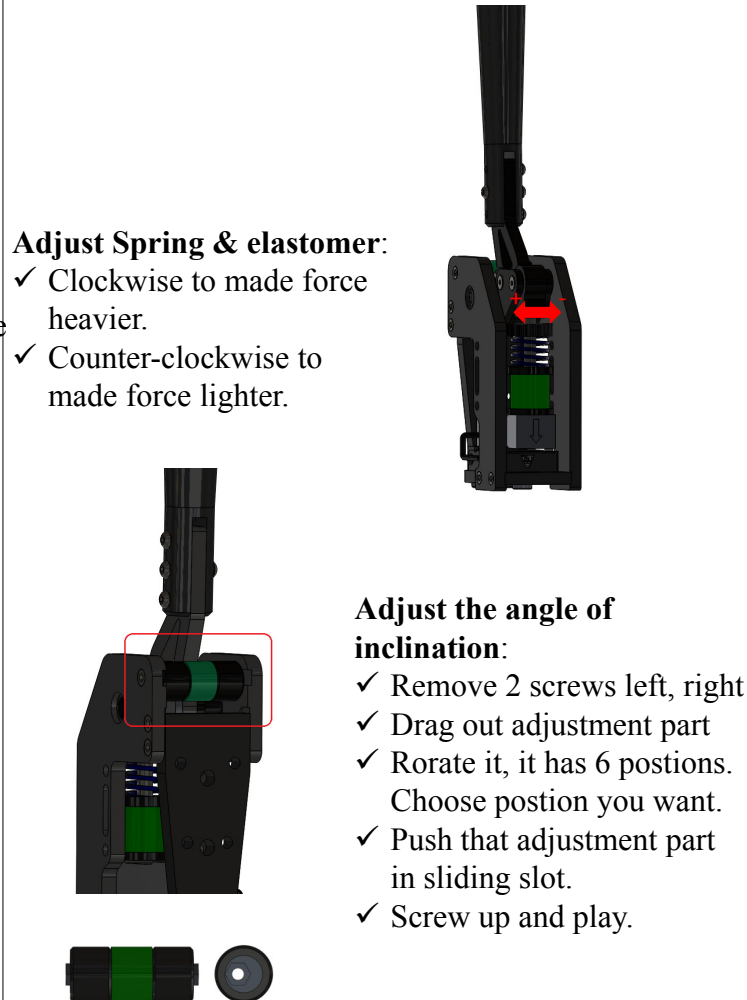

- Adjust Spring & elastomer:**
- ✓ Clockwise to made force heavier.
 - ✓ Counter-clockwise to made force lighter.
- Adjust the angle of inclination:**
- ✓ Remove 2 screws left, right
 - ✓ Drag out adjustment part
 - ✓ Rotate it, it has 6 positions. Choose position you want.
 - ✓ Push that adjustment part in sliding slot.
 - ✓ Screw up and play.

Table Clamp

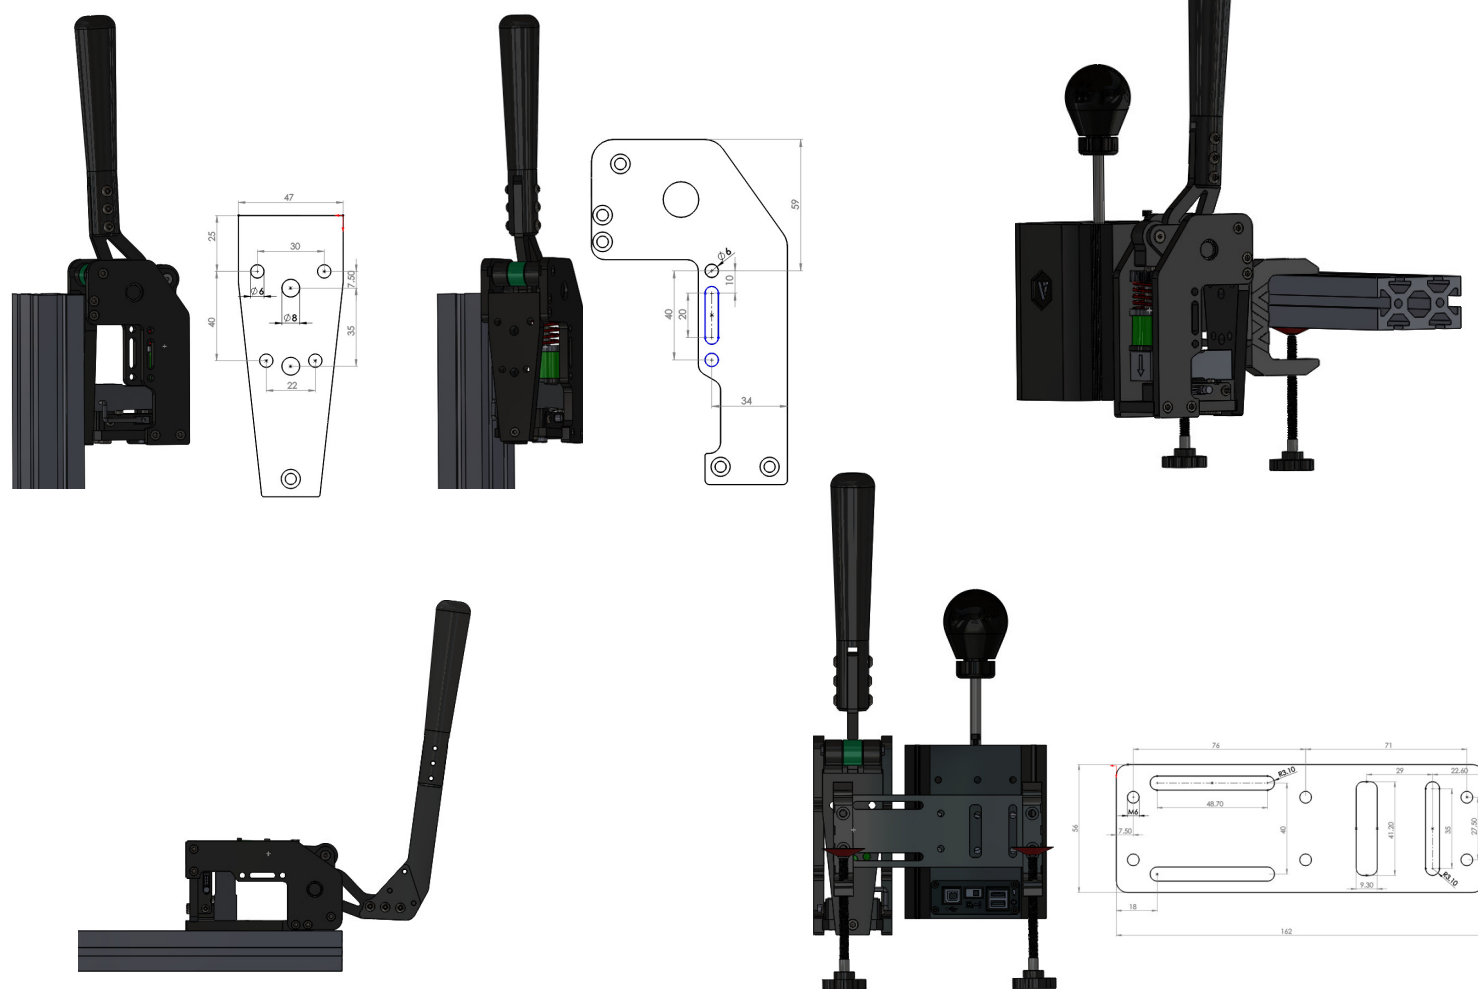

Exchange Elastomer & Spring

