


INSTALLATION

Power down the EuroRack case and unplug it from the wall. Connect the provided EuroRack power cable to your module and then to your EuroRack power bus board as shown.

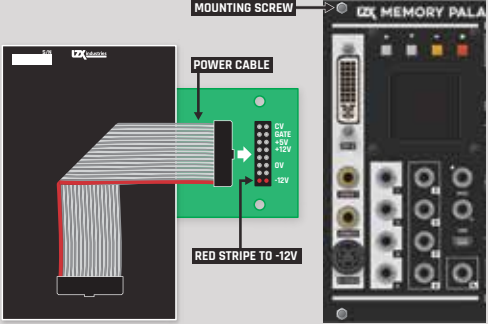

CONNECTING VIDEO SYNC

If your system contains Visual Cortex or another LZX compatible video sync generator module, we recommend that Memory Palace is synchronized to this source. Connect Sync Out from your sync generator (or daisy chained module) to one of Memory Palace's Sync In/Thru jacks using an RCA cable. Set rear sync mode switch to EXTERNAL.

Memory Palace can also act as a master sync generator if your system does not contain one, via its Sync Out jack. Set rear sync mode switch to INTERNAL.

Mount the module in your case using the mounting screws provided by your case's manufacturer.

MEMORY PALACE SPECIFICATIONS

WIDTH	52HP	-12V	40mA MAX
DEPTH	40MM	+5V	N/A
+12V	500mA* MAX	VIDEO SYNC	IN/THRU/OUT

USING AUX +12V POWER\* (OPTIONAL)

If your EuroRack case's power supply cannot support 500mA on its +12V rail, an external 12V DC 1A Wall Wart Power Adapter can be used to augment (not replace) your EuroRack power supply. In this configuration, patch the external supply into the module's 2.1mm DC jack, accessible from the rear, with your case powered off. The +12V EuroRack power draw will now be 40mA MAX (matched with the negative rail.)

THANKS

We wish to thank our beta tester trifacta Bill Wiatroski, Jonas Bers and Johnny Woods, starlight from the Orion nebula, and the community of artists and explorers who supported our development cycle through your preorders.

Product Design by Ed Leckie,  
Jonah Lange & Lars Larsen  
Illustrations by Dave Larsen  
LZXOMPURS  
First Printing, Dec 2018  
©2018 LZX Industries LLC



USING THE MENU DISPLAY

Memory Palace's menu display can access settings and options for many components of the instrument. It is organized into pages, with each page containing one or more options. Each option has a range of selectable values.

- Next Page
- ▲ Select Previous Option
- ▼ Select Next Option
- Change Selected Option's Value

UPDATING THE FIRMWARE

Firmware may be updated via the frontpanel USB jack and the included Mini USB B to USB A cable. Download the firmware and follow the instructions accessible at: <https://www.lzxindustries.net/memorypalace>

MICRO SD CARD STORAGE


Memory Palace has an aux memory connector for MicroSD card to augment the 4GB internal memory. The MicroSD connector is a hinged type, which must be pushed back and lifted to place the card inside.

DVI TO HDMI ADAPTER

Using the included DVI to HDMI adapter dongle, Memory Palace may be connected to an HDMI display or recording device. Please note that many video formats may be passed over a DVI/HDMI signal and that some devices may not be compatible with Memory Palace.



MEMORY PALACE  
USER REFERENCE

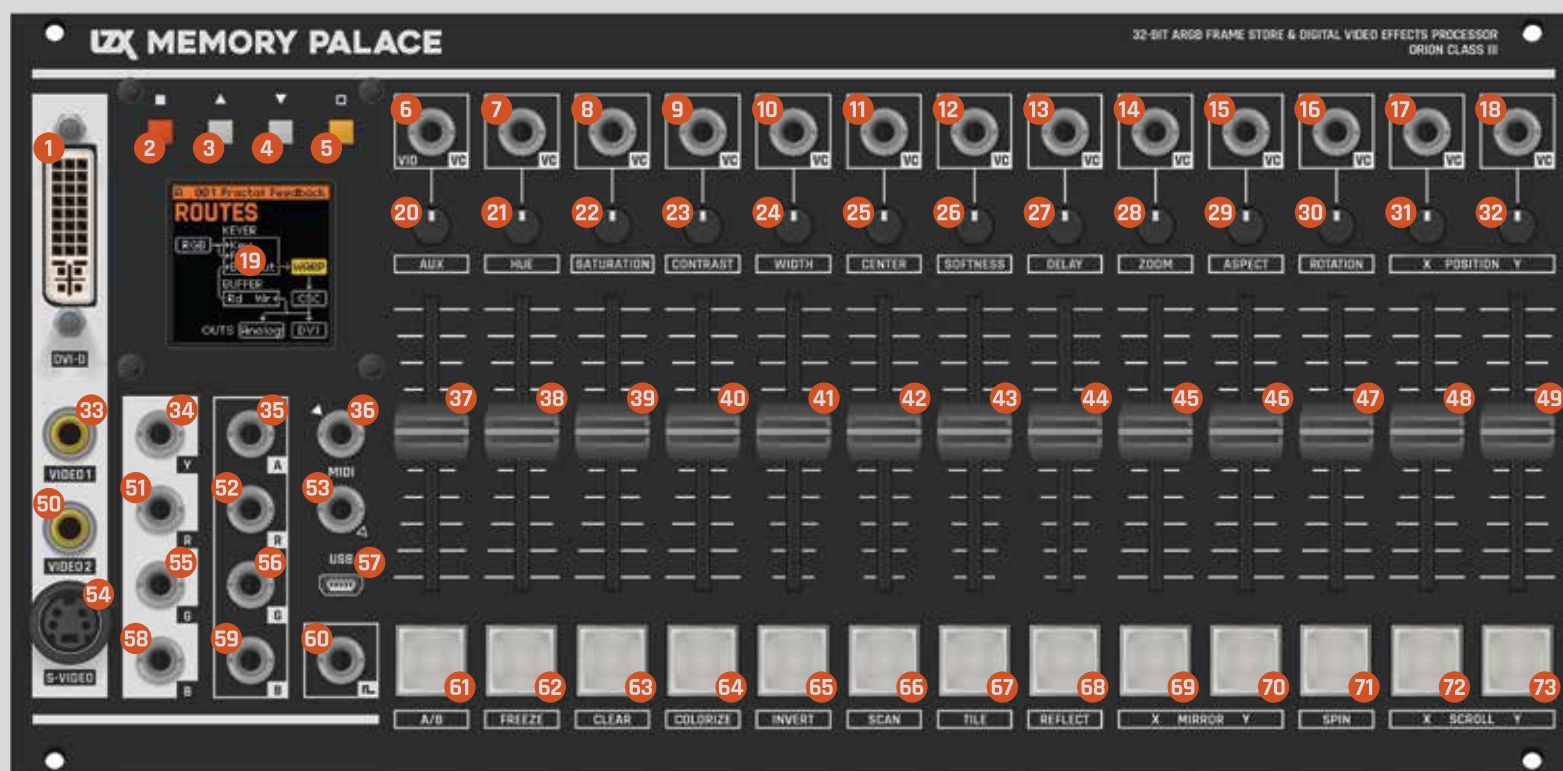

- |                      |                        |                        |                      |                    |
|----------------------|------------------------|------------------------|----------------------|--------------------|
| 1 DVI-D VIDEO OUT    | 16 ROTATION VC IN      | 31 X POSITION VC LEVEL | 46 ASPECT SLIDER     | 61 A/B BUTTON      |
| 2 NEXT PAGE BUTTON   | 17 X POSITION VC IN    | 32 Y POSITION VC LEVEL | 47 ROTATION SLIDER   | 62 FREEZE BUTTON   |
| 3 PREV OPTION BUTTON | 18 Y POSITION VC IN    | 33 CVBS VIDEO OUT 1    | 48 X POSITION SLIDER | 63 CLEAR BUTTON    |
| 4 NEXT OPTION BUTTON | 19 MENU DISPLAY        | 34 LUMA OUT            | 49 Y POSITION SLIDER | 64 COLORIZE BUTTON |
| 5 NEXT VALUE BUTTON  | 20 AUX VC LEVEL        | 35 ALPHA IN            | 50 CVBS VIDEO OUT 2  | 65 INVERT BUTTON   |
| 6 AUX VC IN          | 21 HUE VC LEVEL        | 36 MIDI IN             | 51 RED OUT           | 66 SCAN BUTTON     |
| 7 HUE VC IN          | 22 SATURATION VC LEVEL | 37 AUX SLIDER          | 52 RED IN            | 67 TILE BUTTON     |
| 8 SATURATION VC IN   | 23 CONTRAST VC LEVEL   | 38 HUE SLIDER          | 53 MIDI THRU         | 68 REFLECT BUTTON  |
| 9 CONTRAST VC IN     | 24 WIDTH VC LEVEL      | 39 SATURATION SLIDER   | 54 S-VIDEO OUT       | 69 X MIRROR BUTTON |
| 10 WIDTH VC IN       | 25 CENTER VC LEVEL     | 40 CONTRAST SLIDER     | 55 GREEN IN          | 70 Y MIRROR BUTTON |
| 11 CENTER VC IN      | 26 SOFTNESS VC LEVEL   | 41 WIDTH SLIDER        | 56 GREEN OUT         | 71 SPIN BUTTON     |
| 12 SOFTNESS VC IN    | 27 DELAY VC LEVEL      | 42 CENTER SLIDER       | 57 USB PORT          | 72 X SCROLL BUTTON |
| 13 DELAY VC IN       | 28 ZOOM VC LEVEL       | 43 SOFTNESS SLIDER     | 58 BLUE IN           | 73 Y SCROLL BUTTON |
| 14 ZOOM VC IN        | 29 ASPECT VC LEVEL     | 44 DELAY SLIDER        | 59 BLUE OUT          |                    |
| 15 ASPECT VC IN      | 30 ROTATION VC LEVEL   | 45 ZOOM SLIDER         | 60 TRIGGER/GATE IN   |                    |