

---

Format            CALL CLEARPRINT

#### Description

The CLEARPRINT command is just like the CLEAR command, but it clears columns 3 to 28 that is the PRINT or DISPLAY area leaving columns 1 and 2 along with columns 31 and 32 as are. Use CLEARPRINT to take the place of CALL HCHAR loops. CLEARPRINT runs from ROM.

#### Programs

Shows what CLEARPRINT does	CALL CLEARPRINT
Set loop chars 30 to 159	>100 FOR X=30 to 159
Show characters on screen.	>110 CALL HCHAR(1,1,X,768)
Clear columns 3 to 28	>120 CALL CLEARPRINT
Delay loop	>130 FOR Y=1 TO 200::NEXT Y
Next character	>140 NEXT X
Loop forever	>150 GOTO 100