




Content

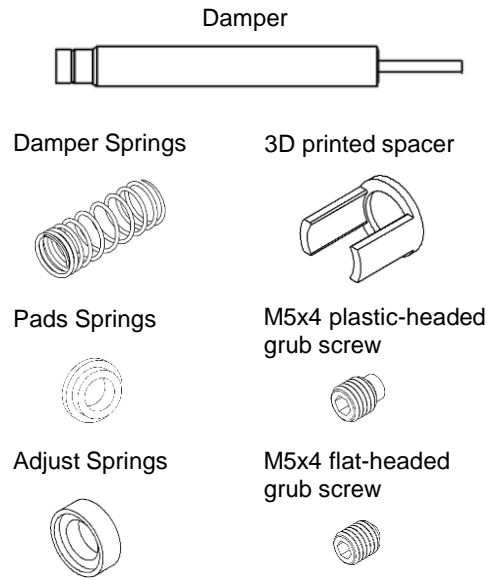


Step 1: Remove the spring

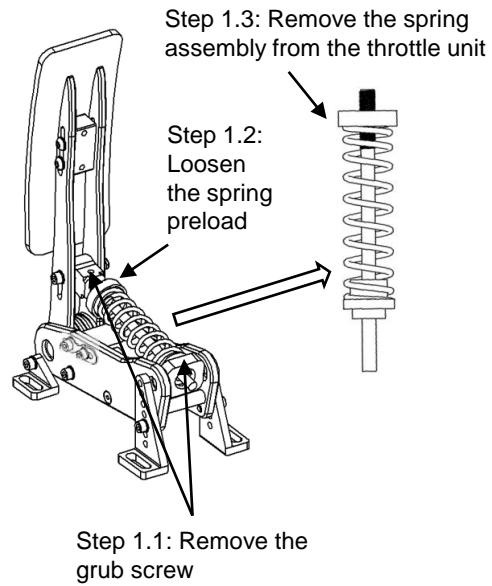


Step 2: Replace the spring assembly with the damper cylinder

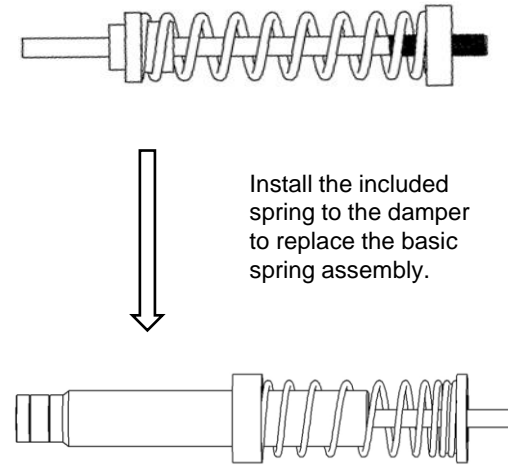

Step 3: Install the damper

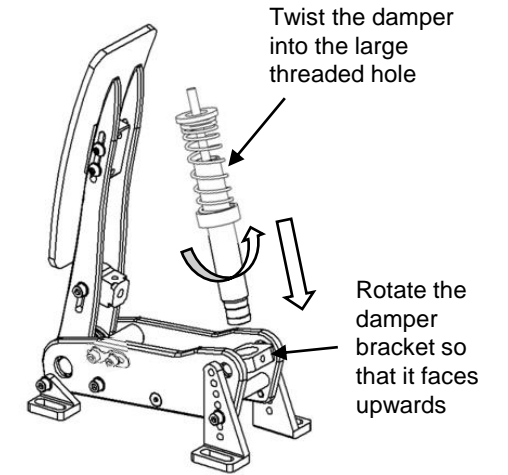

Step 4: Fix the damper rod's end to the pedal arm

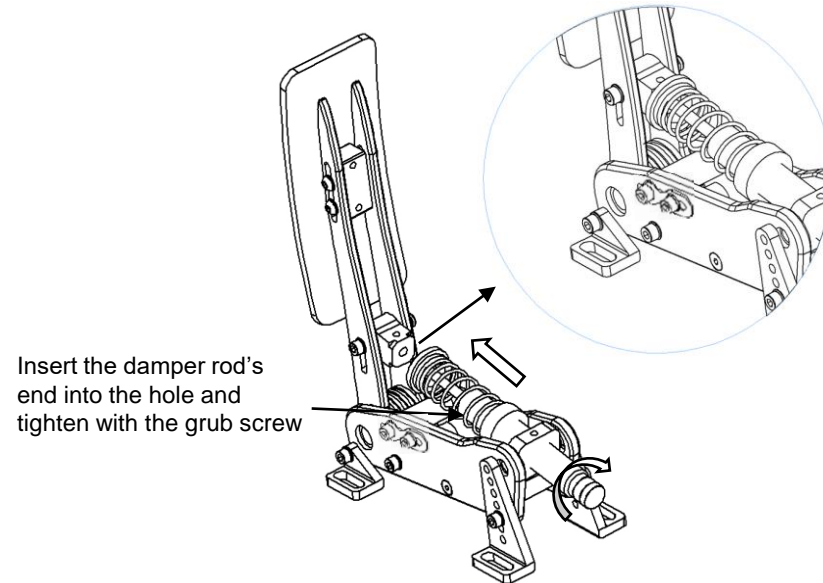

Step 5: Adjust the damper

