



See <https://www.github.com/pepaslabs/opamp-vos>

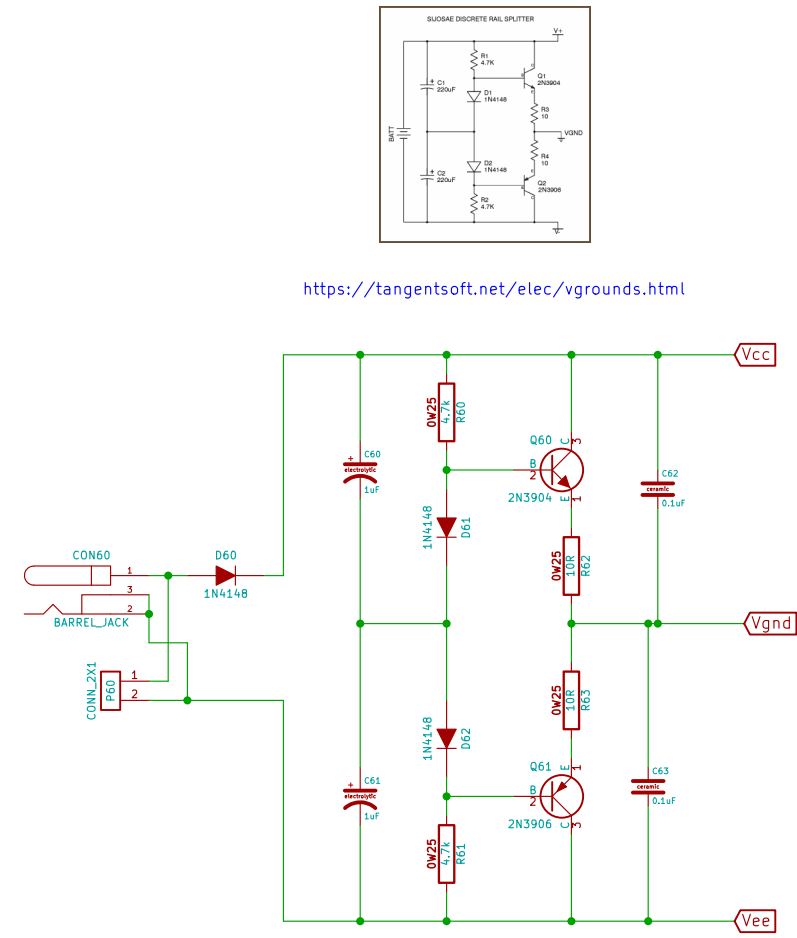

<https://tangentsoft.net/elec/vgrounds.html>

uA741, TL061, etc.

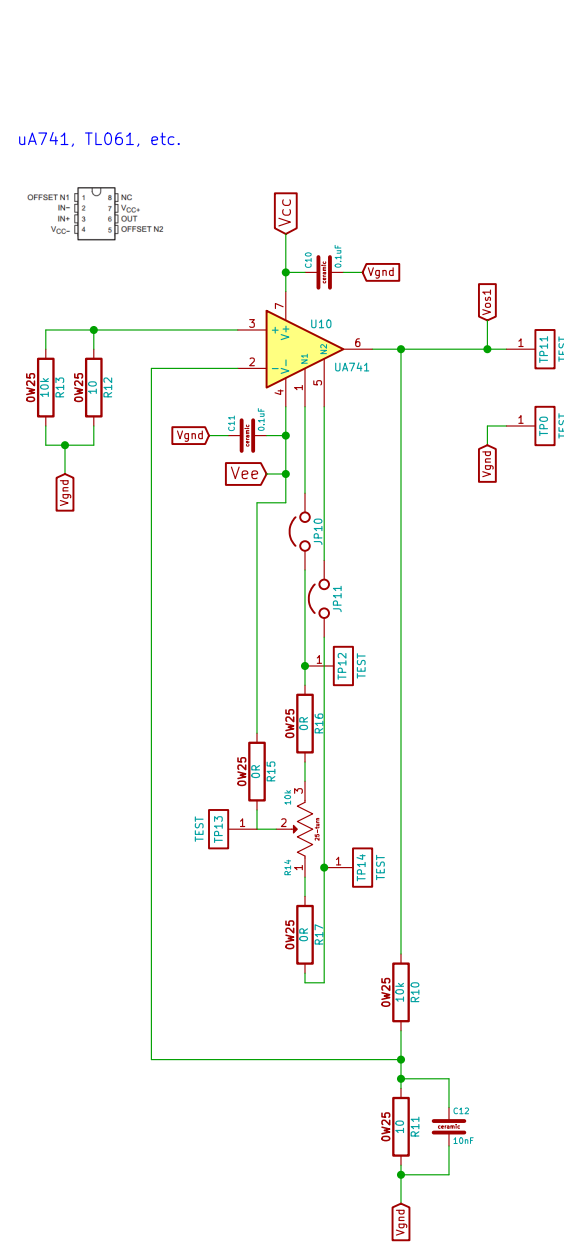

OP07, LT1001, NE5534, etc.



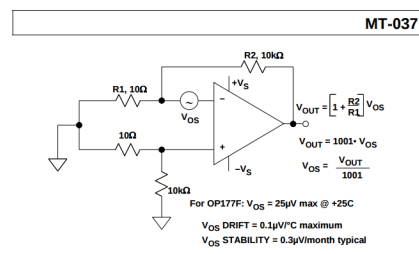


Figure 2: Measuring Input Offset Voltage

<http://www.analog.com/media/en/training-seminars/tutorials/MT-037.pdf>

LM358, TL062, etc.

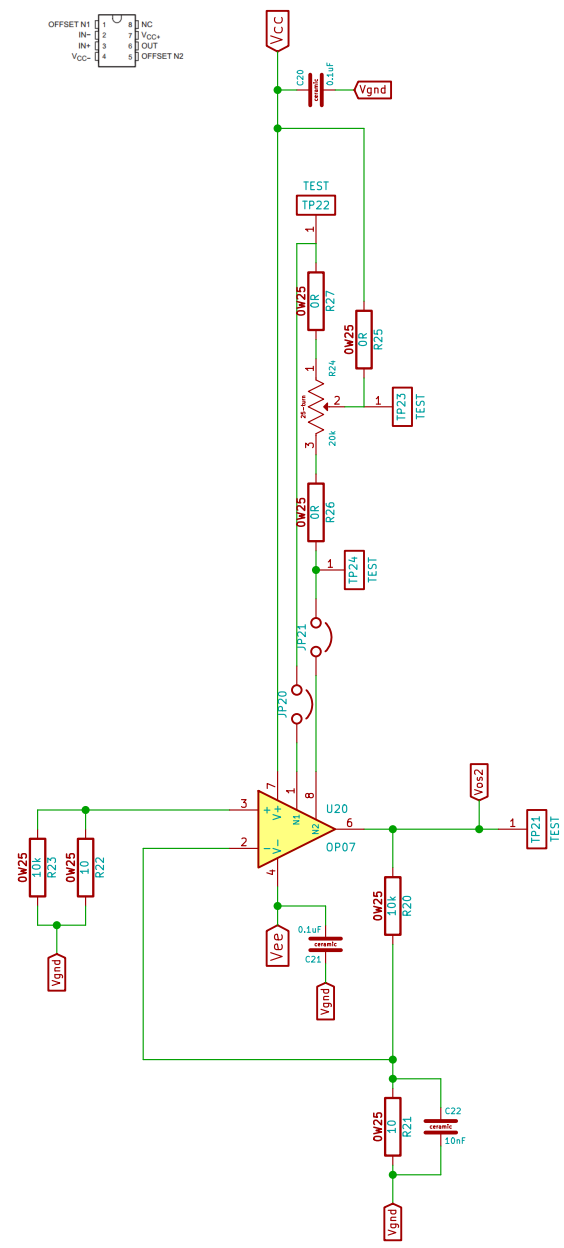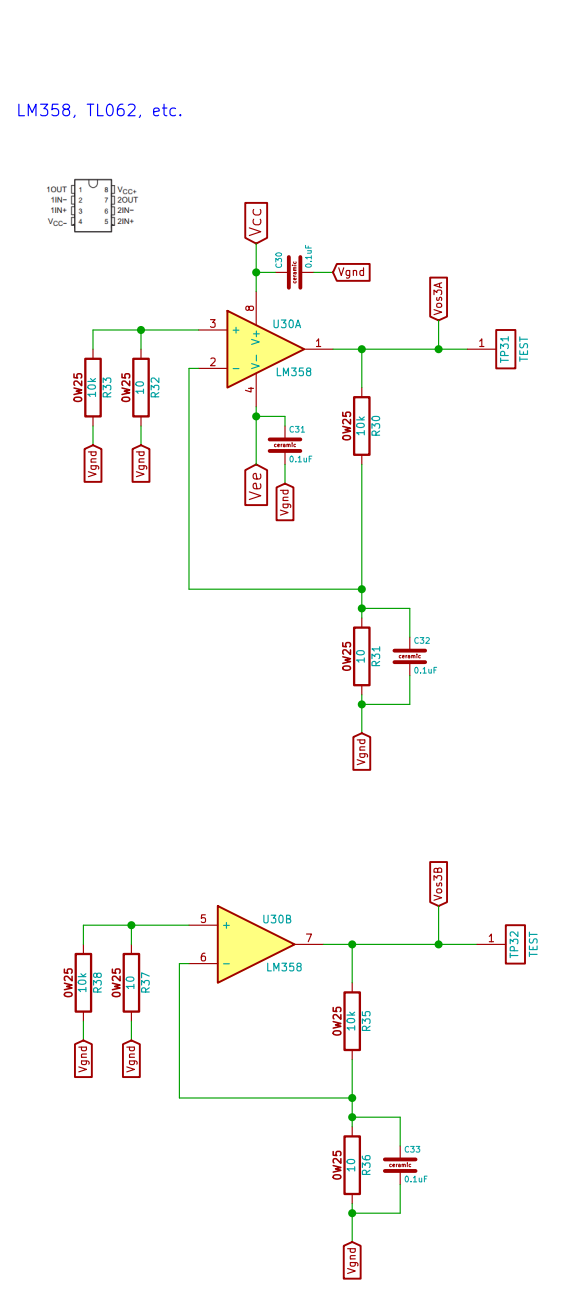

LM324, etc.

